



**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

***Component***

***Maintenance***

***Manual***

***with***

***Illustrated Parts List***

***for***

***SZ58-002-SERIES***

***Motor-Compressor Assembly***

***and***

***SZ65-001-SERIES***

***Motor-Compressor-  
Condenser Assembly***

REVISION G was a complete rewrite of Manual SZ58/65.  
All previous revisions are included.





**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

*List of Effective Pages  
and  
Table of Contents*

<b>PAGE</b>	<b>TITLE</b>	<b>EFFECTIVE DATE / REV</b>
1	COVER PAGE	*
2	RECORD OF REVISIONS	*
3	LIST OF EFFECTIVE PAGES	*
4	1.0 INTRODUCTION	*
5	ILLUSTRATION 1., ILLUSTRATION 2., ILLUSTRATION 3.	*
6	2.0 SPECIAL TOOLS AND EQUIPMENT	*
	2.1 TOOLS	
	2.2 MATERIALS	
7	3.0 REPAIR AND REPLACEMENT OF COMPONENTS	*
8	3.1 DRIVE BELTS	*
9	3.2 COMPRESSOR	*
	ILLUSTRATION 4.	
10	ILLUSTRATION 5., ILLUSTRATION 6., TABLE 1.	*
11	3.3 MOTOR, COMPRESSOR DRIVE	*
	3.4 FAN SHAFT ASSEMBLY	
12	3.5 JACK SHAFT ASSEMBLY	*
13	4.0 SERVICING – REFRIGERANT CHARGE	*
14	continued	*
15	continued	*
16	TABLE 2.	*
17	5.0 SERVICE SCHEDULES	*
18	6.0 TOLERANCES	*
	7.0 TROUBLE SHOOTING	*
19	8.0 ILLUSTRATED PARTS LIST	*
	8.1 EXPLANATION OF SYMBOLS	
20	8.2 IPL SZ58-002	*
21	continued	*
22	FIGURE 1	*
23	FIGURE 2	*
24	FIGURE 3	*
25	FIGURE 4	*
26	8.3 IPL SZ65-001	*
27	continued	
28	FIGURE 5	*
29	FIGURE 6	*
30	FIGURE 7	*
31	FIGURE 8	*
32	WIRING DIAGRAM 1.	*
	9.0 SUMMARY OF MODIFICATIONS	*

\* Revision H, 3-24-06



## **ZEE Systems, Inc.**

### **COMPONENT MAINTENANCE MANUAL SZ58-65**

#### **1.0 INTRODUCTION**

1.1 This Component Maintenance Manual provides information on the maintenance, maintenance schedules and repair and replacement of parts.

1.2 Refer to the Illustrated Parts List (IPL) in Section 5 when using this manual or ordering replacement parts. Parts are identified in parenthesis (FIG-ITEM NO.).

1.3 This MCC is part of a vapor cycle air conditioning system. The refrigerant is R-12 commonly referred to as Freon. Older systems may be converted to use HFC-134a commonly referred to as R134a (Refer to Service Bulletin 65-R134. The compressor has a lubricant reservoir, which is serviced with 14 ounces of oil. In R-12 systems the oil is Mineral Oil. In R-134a systems the oil is Poloyl Ester (P.O.E.) synthetic oil.

#### 1.4 Theory of Operation

1.4.1 Refrigerant is compressed into a high pressure vapor in the electric motor driven compressor. The refrigerant moves to the condenser where air is forced over the coils. As the gas is cooled heat is released and the refrigerant condenses into a high pressure liquid and travels to the evaporators. At the evaporators the liquid passes through a thermostatic expansion valve and becomes a low pressure liquid which, as it passes through the coil, absorbs heat from the cabin and evaporates into a low pressure gas and returns to the compressor for the cycle to begin again.

#### 1.5 Installation

1.5.1 The unit should be installed with the maximum discharge duct size to and from the condenser. It is recommended that a minimum opening area of 65 free square inches be provided into the compartment where the unit is mounted and a minimum of 65 free square inches of duct area from the condenser air discharge. The importance cannot be overemphasized.

1.5.2 Mounting structures and electrical circuits should be properly engineered to provide adequate current with proper overload protection and structured safety. Refer to AC 43-13-1B guidance.


1.5.3 A Modulator Valve is provided for installation in the compressor inlet hose. The valve is preset to control compressor inlet pressure and thereby effectively control Motor current draw to a predetermined value. The Modulator Valve is only in control under certain conditions of heat overload. These conditions have to be preset during Modulator Valve adjustment so it is highly recommended that no field adjustment of this valve be made.

1.5.4 In some installations the compressor is equipped with back seating shut off valves. The unit should never be run without adjusting the shut off stem to the fully screwed out position to insure that the compressor is not damaged from the back seat valve in the closed position during operation. If you compressor has back seating valves the position of the stem is important to the safe operation of the compressor. Refer to the following Illustrations.




**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

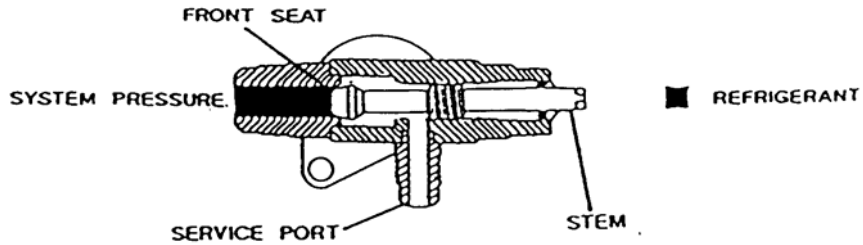


**ILLUSTRATION 1.**

To isolate the compressor from the system the valve can be completely turned in (clockwise) until the stem seals on the front seat. This allows for negligible refrigerant loss when performing service on or replacing the compressor. **CAUTION:** Operating the system with the stem in the front seating position will cause compressor or system failure.

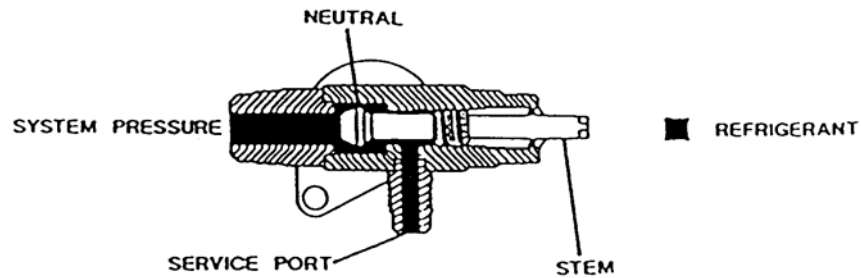

**ILLUSTRATION 2.**

During servicing, to permit refrigerant flow to the system, compressor and the service port simultaneously the stem must be between the front seat and back seat. **NOTE:** The stem should only be in this position during servicing.

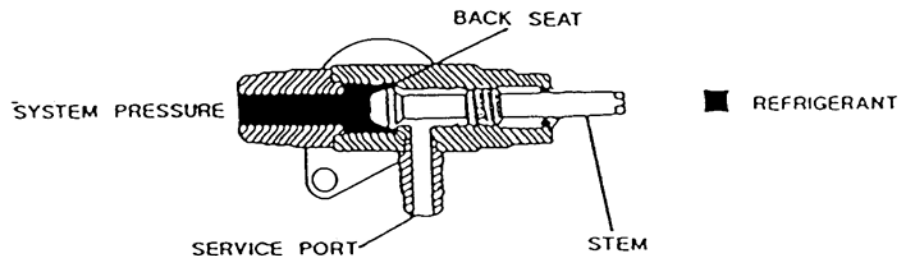

**ILLUSTRATION 3.**

During normal operation the stem must be turned completely out (counter clockwise) against the back seat. **CAUTION:** The stem must be in the back seating position during operation. Other positions will cause compressor or system failure or refrigerant loss.



**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

1.5.5 Any Receiver-Dryer used should be kept capped until installed as the last operation prior to pulling vacuum on the circuit. All hoses in the circuit, particularly those after the Receiver-Dryer must be kept very clean to prevent rubber residue from blocking the expansion valve or entering the compressor valving.

**2.0 SPECIAL TOOLS AND EQUIPMENT**

2.1 TOOLS: The following special tools are required to perform the maintenance described in this manual.

ITEM	SOURCE
Dip, Stick, Compressor Oil	Refer to 3.2.2.1.
Belt deflection gauge.	Commercially available.
Leak Detector, for R-12	Commercially Available.
Leak Detector, for HFC-134a	Commercially Available.
Comb Set, Fin.	Commercially Available.
Power Supply capable of 28VDC, 50 Amps	Commercially Available.
Refrigerant Recovery/Recycle equipment meeting SAE J1990 or J2209 specifications.	Commercially Available.
Manifold Gauge Set, R-12, with automotive service connections.	Commercially Available.
Manifold Gauge Set, R-134a, with automotive service connections.	Commercially Available.
Refrigeration Vacuum Pump.	Commercially Available.
Scale with 0.1 lb. increments (minimum).	Commercially Available.

2.1.2 Refer to applicable ZEE SYSTEMS Service Letter(s) for any additional special tools which may be required to service the air conditioning system.

2.2 MATERIALS: The following material may be required to perform maintenance described in this manual.

ITEM	SOURCE
MS20995C25 Lock Wire	Commercially Available.
MS20995C32 Lock Wire	Commercially Available.



**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

Refrigerant, R-12	Commercially Available.
Refrigerant, HFC-134a	Commercially Available.
Lubricant, Refrigeration (R-12) Mineral Oil	Commercially Available.
Lubricant, Refrigeration (HFC-134a) Lubrizol 2916 Castrol SW100, Icematic Alternate P/N:431756C any Poloyl Ester (P.O.E.) refrigerant oil with ISO of 100 or 150.	Commercially Available.
Lubricant, Refrigerant (HFC-134a) MOD D Sanden SP-20 PAG 100	Commercially Available.
Liquid Detergent, water soluble	Commercially available.
Cloth, lint free	Commercially available.
Tape, Insulation,	Commercially available.

**3.0 REPAIR AND REPLACEMENT OF COMPONENTS**

**CAUTION**

**AIR CONDITIONING SYSTEM UNDER PRESSURE. APPROPRIATE SAFETY MEASURES SHOULD BE TAKEN WHEN SERVICING THIS EQUIPMENT. ONLY TRAINED PERSONNEL WITH APPROVED SAFETY EQUIPMENT SHOULD PERFORM SERVICING DUTIES.**

**NOTE**

**IT IS UNLAWFUL TO RELEASE R-12 OR OTHER REFRIGERANTS TO THE ATMOSPHERE. USE APPROVED RECOVERY/RECYCLE EQUIPMENT TO CAPTURE REFRIGERANTS. USE ONLY LAWFUL MEANS TO DISPOSE OF RECOVERED REFRIGERANTS. CHECK WITH LOCAL AGENCIES FOR APPROVED DISPOSAL PROCEDURES.**

**NOTE**

**CAP ALL OPEN LINES TO PREVENT CONTAMINANTS AND MOISTURE FROM ENTERING THE SYSTEM.**



**ZEE Systems, Inc.**

***COMPONENT MAINTENANCE MANUAL SZ58-65***

**NOTE**

**DUE TO THE TIGHT FIT OF THE MOTOR COMPRESSOR CONDENSER ASSY IT MAY BE NECESSARY TO REMOVE THE MOTOR COMPRESSOR CONDENSER ASSY AND THE EVAPORATOR TO PERFORM SOME OF THE MAINTENANCE DESCRIBED BELOW.**

3.1 DRIVE BELTS (1/2-24, 1-35) Refer to CMM Z26-8900 for units with MOD D.

3.1.1 REMOVAL. Extreme care should be taken during maintenance not to strike or use pullers directly against the hardened (black or grey) area of these pulleys as this may crack or chip the anodized surface.

3.1.2 Secondary Belt (1-35): To remove the belts start with the secondary belt. Loosen the four bolts (1/2/3-10) then loosen the secondary belt adjusting bolt (2-12). This slides the compressor toward the jackshaft assembly (1-3), remove the secondary belt from the compressor pulley first then the small pulley on the jack shaft assembly.

3.1.2 Primary Belt (1/2-24): Loosen the two locking bolts (1-11). Put a 3/8" diameter pin in the hole in the jackshaft and lift upward. This will loosen the primary belt, remove the belt from the jack shaft pulley first then from the motor pulley.

3.1.2 INSPECTION: Inspect each belt for deterioration, damage and fraying. Replace defective belts.

3.1.2.1 Check the belt alignment before running the motor. Turn the compressor pulley by hand to see that belts are properly aligned. Slight striking of the belt against the rim on the small pulleys is normal but not to the point where chafing occurs. Readjust belts if necessary. Next run the motor and check for smooth operation. If a belt hops or flutters it is too loose. If the belt is too tight against the pulley rim a discharge of fine dust like rubber particles will occur. Check the condition of the smaller pulley rim and readjust belts as necessary. Once the belts are adjusted and the hardware is properly tightened no further adjustments should be necessary if the components are not disturbed.

3.1.4 INSTALLATION: Always place the belt over the smaller diameter pulley first then carefully slide the belt over the larger diameter pulley. Care should be taken to not tear the edges of the belts. Place both belts loosely over the pulleys.

3.1.4.1 With the belts loosely in place, make sure that the jack shaft assembly (1-3) is centered axially in the frame assembly so the belts will track as close as possible to the center of each pulley and 3/8" pin hole is pointing upward. Tighten the four compressor mount bolts (1/2/3-10) to the point where the compressor slides but that compressor base plate (1/3-28) is fairly well seated. If this is not done the belt tension will change when the bolts (1/2/3-10) are tightened.

3.1.5 BELT ADJUSTMENT: Anytime the primary belt has been loosened both belts must be loosened and readjusted. Always adjust the primary belt first.





**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

3.1.5.1 Primary Belt (1/2-24) Adjustment: Insert the 3/8" pin in the jack shaft assembly (1-3) and push downward on the pin to tighten the primary belt until a tension of 1/8" deflection midway between pulleys with 2-3 pound pull is achieved. Tighten the two locking bolts (1-11) to torque of 30 foot-pounds.

3.1.5.2 Secondary Belt (1-35) Adjustment: Tighten the adjusting bolt (2-12) until a tension of 1/8" deflection midway between pulleys with a 4-5 pound pull is achieved. Tighten the four bolts (1/2/3-10) to a torque of 40 foot-pounds. Loosen the adjusting bolt (2-12) and tighten to a torque of 15 inch-pounds.


3.1.5.3 Once a drive is properly adjusted no further maintenance should be required unless the adjustment is disturbed by component replacement. It is recommended that belts be replaced in pairs.

3.2 COMPRESSOR (1-2) Refer to CMM Z26-8900 for units with MOD D.

3.2.1 REMOVAL: Loosen the four bolts (1/2/3-10) then loosen the adjusting bolt (2-12) and remove the secondary belt. Remove the four bolts and washers (1/2/3-10, 1/2/3-10A) and adjusting bolt (2-12) and lift the compressor (1-2) and base plate (1/3-28) from the side frames. Separate the compressor from the base plate by loosening and removing the three bolts (NS-28A). To remove the pulley (1/3-7) loosen, but do not completely remove bolt (3-20) and washer (3-20A). Evenly pry between the compressor boss and the pulley hub until the pulley is free. Now remove the bolt (3-20), washer (3-20A) and pulley (1/3-7) and set aside to be installed on new compressor.

3.2.2 INSPECTION: Check for signs oil leakage around the fittings.

3.2.2.1 Check oil level. Fashion an oil dipstick from any soft metal bar or rod stock approximately 9-1/4" long. Bend metal as shown in Illustration 4 below. Remove the oil fill plug on top of the compressor, take care not damage the O-ring. Place the dipstick in the opening; make sure the dip stick goes in past the crankshaft and pistons. Minimum oil depth is 13/16"; full is 1-5/8". Refer to Section 6.0 for correct oil level for your system and add oil as necessary. Return and tighten oil fill plug.

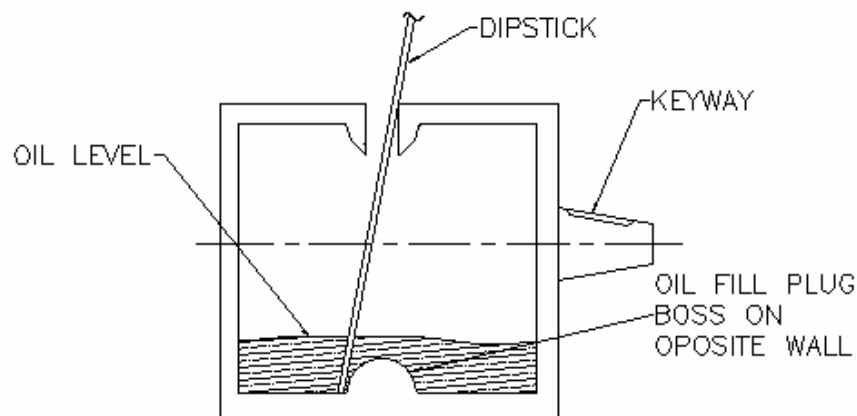


**ILLUSTRATION 4.**




**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

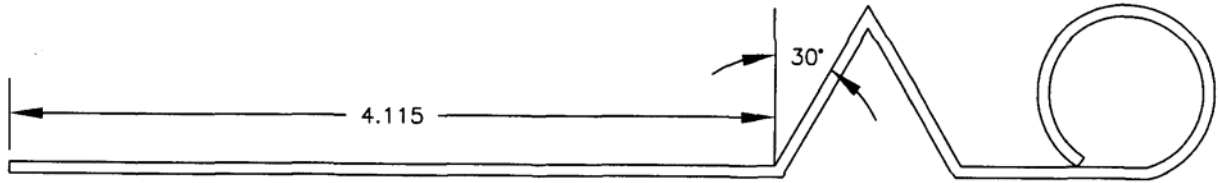

MOD D  
Dip stick Scale: FULL  
**ILLUSTRATION 5.**

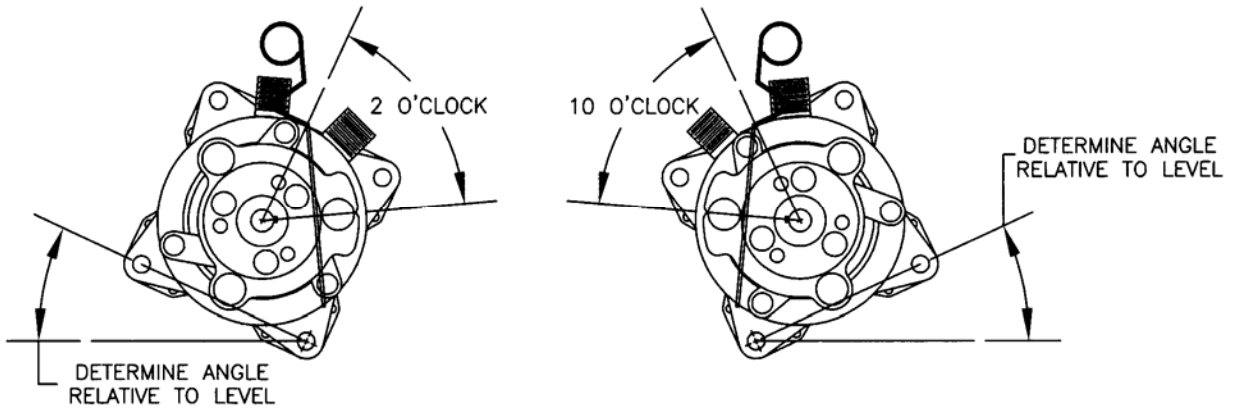

MOD D  
Determine the angle of the compressor relative to level.  
**ILLUSTRATION 6.**

ANGLE	ACCEPTABLE OIL LEVEL	
	mm	INCHES
0	9 - 15	.35 - .59
10	12 - 18	.47 - .71
20	15 - 21	.59 - .83
30	18 - 24	.71 - .94

**TABLE 1.**

MOD D  
**TABLE 1.**



## **ZEE Systems, Inc.**

### **COMPONENT MAINTENANCE MANUAL SZ58-65**

3.2.3 PULLEY INSTALLATION: Place the pulley on the new compressor and align on the shaft key. Using a block of wood, lightly tap the pulley on the compressor shaft. Take care not to damage pulley or strike tooth rim area. Place washer (3-20A) and bolt (3-20) in place and torque to 20 foot-pounds, secure with .032 diameter lock wire.

3.2.4 BASE PLATE REASSEMBLY: Attach the base plate (1/3-28) to the compressor using the three bolts (NS-24, NS-51, NS-56), torque to 45 foot-pounds.

3.2.5 INSTALLATION: Set the assembled compressor and base plate (3.2.3 and 3.2.4) on the side frames (1/2-25, 1/3-44) and reassemble using bolts and washers (1/2/3-10). Tighten and torque to 40 foot-pounds, secure with .032 dia. lock wire. Install belts in accordance with Section 3.1.4.

3.3 MOTOR, COMPRESSOR DRIVE (1-1) Refer to CMM Z26-8900 for units with MOD D.

3.3.1 REMOVAL: Disconnect the positive and negative leads to the motor. Remove and set aside the primary belt in accordance with paragraph 3.1.3.2. Hold the motor pulley with a spanner wrench and loosen (right hand thread) the fan shaft assembly (1/4-46) by turning the 1" hex nut. Do not completely remove the fan shaft assembly at this time.

3.3.1.1 Remove the safety bolts (2/4-38). Loosen the lock nuts (2/4-15A). Back out the motor mount locking bolts (2/4-15). It may be necessary to loosen bolt (2/4-39).

3.3.1.2 The motor may be slightly stuck to the support assemblies (1-34), lightly pry with a screwdriver to break it loose. Slide the motor away from the condenser coil far enough to remove the fan shaft assembly (1/4-46) and spacer (1-47) from the motor shaft, set it aside. Now slide the motor completely out of the frame.

NOTE: New or ZEE SYSTEMS overhauled motors come with the motor pulley fitted on the shaft.

3.3.2 INSPECTION: Refer to Service Letter 58-001 for brush inspection information.

3.3.3 INSTALLATION: Slide the motor into the side frames (1/2-25, 1/3-44) place the spacer (1-47) on the fan shaft assembly (1/4-46) and start it on the end of the motor shaft, tighten to finger tight. Hold the motor and line up the two supports (1-34) and start the safety bolts (2/4-38).

3.3.3.1 Tighten the two mounting bolts (2/4-15) and torque to 20 inch-pounds then tighten the lock nuts (2/4-15A). Check to insure the three point mount (two supports and mounting bolts) is maintained. If bolt (2/4-39) was loosen, tighten it now. Tighten the two safety bolts (2/4-15).

3.3.3.2 Tighten the fan shaft assembly (1/4-46). Using a spanner wrench hold the motor pulley and tighten the 1" hex nut on fan shaft assembly.

3.3.3.3 Install and adjust the belts (3.1.4 and 3.1.5).

3.4 FAN SHAFT ASSEMBLY (1/4-46) Not applicable to units with MOD D.



**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

3.4.1 REMOVAL: Remove and set aside the primary belt in accordance with paragraph 3.1.3. Hold the motor pulley with a spanner wrench and loosen (right hand thread) the fan shaft assembly (1/4-46) by turning the 1" hex nut.

3.4.2 INSPECTION. Check for broken or damaged blades (1/4-46A). Replace blades as necessary. Inspect the blades are evenly spaced. Blades should be spaced every 30 degrees. Correct blade position as required.

3.4.2 INSTALLATION: Place the spacer (1-45) on the fan shaft assembly (1/4-46) Attach the fan shaft assembly (1/4-46) and start it on the end of the motor shaft, tighten spacer to finger tight. Adjust belts in accordance with paragraph 2.1.5.

3.5 JACK SHAFT ASSEMBLY (1-3) Not applicable to units with MOD D

3.5.1 REMOVAL: First remove the belts in accordance with 3.1.3. Take care not to nick or damage the hard anodized (black/grey) tooth area of the pulley.

3.5.1.1 Remove bolts (2-9) from the Browning taper lock bushing (2-5). Place the bolts (2-5) in the threaded holes in the bushing flange. Remove the pulley by alternately tightening the bolts into the bushing. Tap bushing from shaft and remove pulley. Loosen bolts (1-11) and slide jack shaft assembly from frame. It may be necessary to wedge open the clamp (1-26, 1-27) if the jack shaft does not readily slide out.

3.5.2 INSPECTION: Inspect the pulley (2-4) for wear. Check for damaged or rounded teeth. Excessive wear will show as shiny areas on the teeth. Replace if damaged.

3.5.2.1 Inspect the small pulley (1/3-8) damaged or rounded teeth. Replace if damaged.

3.5.2.2 Inspect the jack shaft housing for cracks or other damage. Turn the shaft in the housing, it should turn free and true, there should not be any end play in the bearings. Replace assembly as required. NOTE: New or overhauled Jack Shaft Assembly from ZEE SYSTEMS will come with the small pulley fitted to the shaft.

3.5.3 INSTALLATION: Slide jack shaft assembly into clamps (1-26, 1-27) and align it so the belt will ride centered on the compressor pulley and the small pulley on the jack shaft, and tighten bolts (1-11) to hold the assembly while attaching the other (2-4) jack shaft (large) pulley. Slip the pulley (2-4) over the shaft. Using a rawhide mallet tap bushing into the pulley until approximately 1/8" of the shaft shows.

NOTE: If bushing is tight DO NOT PRY the slot open, this will disturb the machined alignment of the bushing.

3.5.3.1 Install the two bolts and washers (2-9, 2-9A) and evenly tighten, this will move the pulley toward the bushing, continue tightening until the outer edge of the pulley is even with the outer flange of the motor pulley so the belt will ride centered. Turn shaft and check the pulley is square on shaft, realign as necessary. This takes patience and will become a quick and easy procedure with practice.



**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

3.5.3.2 Install and align belt(s) in accordance with paragraphs 3.1.4 and 3.1.5. The belt (1/2-24) should ride in the middle of the (large) pulley (2-4). Run the motor and check the belt does not walk on the pulley, then secure (2-9, 2-9A) bolts and washers with .025 diameter lock wire.

**CAUTION**

**AIR CONDITIONING SYSTEM UNDER PRESSURE. APPROPRIATE SAFETY MEASURES SHOULD BE TAKEN WHEN SERVICING THIS EQUIPMENT. ONLY TRAINED PERSONNEL WITH APPROVED SAFETY EQUIPMENT SHOULD PERFORM SERVICING DUTIES.**

**NOTE**

**IT IS UNLAWFUL TO RELEASE R-12 OR OTHER REFRIGERANTS TO THE ATMOSPHERE. USE APPROVED RECOVERY/RECYCLE EQUIPMENT TO CAPTURE REFRIGERANTS. USE ONLY LAWFUL MEANS TO DISPOSE OF RECOVERED REFRIGERANTS. CHECK WITH LOCAL AGENCIES FOR APPROVED DISPOSAL PROCEDURES.**

**NOTE**

**CAP ALL OPEN LINES TO PREVENT CONTAMINANTS AND MOISTURE FROM ENTERING THE SYSTEM.**

**4.0 SERVICING - REFRIGERANT CHARGE**

4.1 R-12 CHARGING INSTRUCTIONS. A sight glass is not used to determine adequate refrigerant charge for R-12. See Section 2.1 and 2.2 for required equipment and materials to service the air conditioning system.

4.1.1 On new installations or whenever the refrigerant has been evacuated from the air conditioning system the oil in the compressor must be checked and replenished as necessary. Check the oil at 100 hours of system operation. Thereafter, check the oil every 500 hours of operation. DO NOT add oil to the refrigerant.

**NOTE**

**REFER TO SERVICE EQUIPMENT MANUFACTURERS INSTRUCTIONS. SOME EQUIPMENT MAY COMBINE FUNCTIONS.**

4.1.2 Evacuate the system for a minimum of four hours *anytime* the system has been opened to atmosphere. If the system has been opened for component replacement or in high humidity the receiver-dryer should be replaced and the system evacuated for a minimum of 8 hours.

4.1.3 Static Charge: Shut OFF valve in the manifold set. Attach the manifold line to the refrigerant bottle. Attach the High side manifold line to the Pressure side Service Port and the Low side manifold line to the Suction side of the system.

**CAUTION**

**NEVER INVERT THE REFRIGERANT BOTTLE SO THE DISCHARGE VALVE IS ON THE BOTTOM. THE REFRIGERANT BOTTLE MUST BE KEPT UPRIGHT TO PERMIT OF GAS ONLY INTO THE COMPRESSOR. INVERTING THE BOTTLE WILL PERMIT LIQUID TO ENTER THE COMPRESSOR RESULTING POSSIBLE COMPRESSOR DAMAGE. THIS PRACTICE WILL VOID COMPRESSOR WARRANTY.**



**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

4.1.4 With motor OFF, OPEN the High Pressure and Low Pressure manifold valve. Allow the system to take a static charge. When the pressures equalize CLOSE both the High and Low pressure valves at the manifold.

4.1.5 Using a leak detector check for leaks. Correct any problems. Perform 4.1.3 and 4.1.4 until a tight system with no leaks is achieved.

4.1.6 With the High and Low pressure manifold valves CLOSED, turn ON the compressor motor and evaporator blowers. OPEN only the **Low** pressure manifold valve until the Manifold gauge reads 30-40 pounds pressure.

4.1.7 Keep close watch on the sight glass on the Receiver-Dryer. When the bubbles moving through the sight glass slow to a few per second the system is charged close the service valves on the manifold. DO NOT service until all of the bubbles are gone.

4.1.8 Disconnect the servicing equipment. Replace the High side, Low side service port caps and back seat valve caps. Move the back seat valves to the full back seat position. (See ILLUSTRATION 3.)

4.1.9 TOPPING OFF: Refer to steps 4.1.6, through 4.1.8.

4.1 R-134a CHARGING INSTRUCTIONS. are basically the same for R-12 (Freon) and CFC-free R-134a refrigerant. However, a sight glass is not used to determine adequate refrigerant charge for R-134a. R-134a systems are charged to a predetermined amount (by weight) of refrigerant. See Section 2.1 and 2.2 for required equipment and materials to service the air conditioning system.

4.1.1 On new installations or whenever the refrigerant has been evacuated from the air conditioning system the oil in the compressor must be checked and replenished as necessary. Check the oil at 100 hours of system operation. Thereafter, check the oil every 500 hours of operation. DO NOT add oil to the refrigerant.

**NOTE**

**REFER TO SERVICE EQUIPMENT MANUFACTURERS INSTRUCTIONS. SOME EQUIPMENT MAY COMBINE FUNCTIONS.**

4.1.2 Evacuate the system for a minimum of four hours anytime the system has been opened to atmosphere. If the system has been opened for component replacement or in high humidity the receiver-dryer should be replaced and the system evacuated for a minimum of 8 hours.

4.1.3 Weigh the refrigerant bottle.

**CAUTION**

**NEVER INVERT THE REFRIGERANT BOTTLE SO THE DISCHARGE VALVE IS ON THE BOTTOM. THE REFRIGERANT BOTTLE MUST BE KEPT UPRIGHT TO PERMIT OF GAS ONLY INTO THE COMPRESSOR. INVERTING THE BOTTLE WILL PERMIT LIQUID TO ENTER THE COMPRESSOR RESULTING POSSIBLE COMPRESSOR DAMAGE. THIS PRACTICE WILL VOID COMPRESSOR WARRANTY.**



**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

4.1.4 Static Charge: Shut OFF valve in the manifold set. Attach the manifold line to the refrigerant bottle. Attach the High side manifold line to the Pressure side Service Port and the Low side manifold line to the Suction side of the system.

4.1.5 With motor OFF, OPEN the High Pressure and Low Pressure manifold valve. Allow the system to take a static charge. When the pressures equalize or if the maximum charge weight is achieved CLOSE both the High and Low pressure valves at the manifold.

4.1.6 Using a leak detector check for leaks. Correct any problems. Perform 4.1.4 and 4.1.5 until a tight system with no leaks is achieved.

4.1.7 With the High and Low pressure manifold valves CLOSED, turn ON the compressor motor and evaporator blowers. OPEN only the **Low** pressure manifold valve until the Manifold gauge reads 30-40 pounds pressure.

4.1.7.1 Keep close watch on the scale and when the target weight is reached immediately CLOSE the Low pressure manifold valve.

4.1.8 Disconnect the servicing equipment. Replace the High side (red), Low side (blue) service port caps and back seat valve caps.

4.2 TOPPING OFF: To top off the charge check the refrigerant charge by running the system with an ambient air temperature of at least 80F°.

4.2.1 Place a temperature measuring device to read the ambient air temperature entering the condenser.

4.2.2 Connect the High side manifold line to the Discharge pressure port. Connect the Low side manifold line to the Suction port.

4.2.3 Using the TEMPERATURE-PRESSURE CHART, TABLE 2. convert the High side pressure reading into temperature.

4.2.4 Calculate the Temperature Difference (TD) by subtracting the air inlet temperature from the temperature determined in 4.3.3. The TD should be less than 30F°. If the TD is higher than 30F° the system is overcharged or there is an obstructed air flow over the condenser.

4.2.4.1 If the system is overcharged remove refrigerant using recovery equipment by approved methods.

4.2.4.1 If the TD is less than 20F° open the Low side manifold until the gauge reads 30-40 PSIG. Continue to charge until the TD is 25F°.

4.2.5 When service is complete disconnect the service hoses and replace the High side (red), Low side (blue) service port caps and back seat valve caps.



**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

4.3 INSPECTION: With the system running check for leaks, proper belt alignments, vibration, and high current draw.

TEMP		PRESSURE (PSIG)		TEMP		PRESSURE (PSIG)	
F°	C°	R-12	R-134a	F°	C°	R-12	R-134a
50	10	46.7	45.5	100	37.8	117.2	124.3
52		48.8	47.7	102		120.9	128.5
54		51.0	50.1	104		124.7	132.9
56		53.2	52.3	106		128.5	137.3
58		55.4	55.0	108		132.4	142.8
60	15.6	57.7	57.5	110	43.3	136.4	146.5
62		60.1	60.1	112		140.5	151.3
64		62.5	62.7	114		144.7	156.1
66		65.0	65.5	116		148.9	161.1
68		67.6	68.6	118		153.2	166.1
70	21.1	70.2	71.2	120	48.9	157.7	171.3
72		72.9	74.2	122		162.2	176.6
74		75.6	77.2	124		166.7	182.0
76		78.4	80.3	126		171.4	187.5
78		81.3	83.5	128		176.2	193.1
80	26.7	84.2	86.8	130	54.4	181.0	198.9
82		87.2	90.2	132		185.9	204.7
84		90.2	93.6	134		191.0	210.7
86		93.3	97.1	136		196.1	216.8
88		96.5	100.7	138		201.3	223.0
90	32.2	99.8	104.4	140	60	206.6	229.4
92		103.1	108.2	142		212.0	235.8
94		106.5	112.1	144		217.5	242.4
96		110.0	116.1	146		223.1	249.2
98		113.5	120.1	148		228.8	256.0
				150	65.6	234.6	263.0

**TABLE 2.**





**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

**5.0 SERVICE SCHEDULES**

5.1 MAINTENANCE SCHEDULE

<b>ITEM DESCRIPTION</b>	<b>INSPECTION INTERVAL *</b>	<b>R&amp;R/T.B.O. HRS</b>
SZ65-001 ** M-C-C	EVERY 250 HRS* - INSPECT FOR LOOSE, DAMAGED ITEMS. CHECK FOR AND REMOVE ANY DEBRIS OR OBSTRUCTIONS TO THE CONDENSER COILS. CHECK FOR SIGNS OF OIL LEAKS.	2500
SZ58-002 ** M-C	EVERY 250 HRS* - INSPECT FOR LOOSE, DAMAGED ITEMS. CHECK FOR SIGNS OF OIL LEAKS.	2500
DRIVE BELTS** (1/2-24, 1-35)	EVERY 250 HRS* - INSPECT AS PER SECTION 3.1.2.	1250
MOTOR ** (1-1)	EVERY 1000 HRS* - INSPECT AS PER SECTION 3.3.2 AND SERVICE LETTER 58-001.	1500
JACK SHAFT** (1-3)	EVERY 1000 HRS* - INSPECT AS PER SECTION 3.5.2.	1500
COMPRESSOR** (1-2)	AFTER THE FIRST 100 HOURS (NEW OR AFTER OVERHAUL) - INSPECT AS PER SECTION 3.2.2.1  EVERY 500 HRS - INSPECT AS PER SECTION 3.2.2.	2500
COMPRESSOR*** MOD D	AFTER THE FIRST 100 HOURS (NEW OR AFTER OVERHAUL) - INSPECT AS PER CMM Z26-8900.  EVERY 500 HRS - INSPECT AS PER CMM Z26-8900.	2500

\* UNIT OPERATING TIME

\*\* COMPONENT IS PART OF THE SZ58-002 MOTOR-COMPRESSOR ASSEMBLY.

\*\*\* COMPONENT IS PART OF THE Z26-8900 MOTOR-COMPRESSOR ASSEMBLY.



**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

**6.0 TOLERANCES**

6.1 COMPRESSOR OIL. The minimum compressor oil depth is 13/16" (20mm). The Maximum is 1-5/8" (41mm). Replenish as necessary.

6.2 REFRIGERANT CHARGE. Refrigerant charge is 4.0 lbs. of R-134a into a dry system.

6.3 BRUSH LENGTH, COMPRESSOR DRIVE MOTOR. The minimum brush length on the drive motor is 0.750" (19mm). Refer to SIL 58-001.

6.4 TORQUE VALUES. Use standard torque values for bolts. Refer to Manual SZ206 for torque values and torque sequence for the compressor.

6.4.1 TORQUE VALUES. If not specified, use standard torque values for bolts.

14 mm Pulley Nut 11-15 lb-ft (15-21 N-m)

17 mm (10 mm Compressor Bolt) Nut 30 lb-ft (42 N-m)

**7.0 TROUBLE SHOOTING**

<b>TROUBLE</b>	<b>POSSIBLE CAUSE</b>	<b>REMEDY</b>
Compressor Motor trips circuit breaker.	Motor shorted. Motor brushes worn beyond limits.	Replace Motor.
Compressor Motor trips current limiter.	Short in wiring.	Check wiring to motor, repair as required.
Compressor Motor inoperative.	Motor open. Motor brushes worn beyond limits.	Replace Motor.
	Short in wiring.	Check wiring to motor, repair as required.
Excessive vibration at Motor/Compressor.	Improper belt tension.	Adjust belt to correct tension.
	Worn, damaged or loose or over tightened mounts.	Adjust or replace mounts.



**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

<b>TROUBLE</b>	<b>POSSIBLE CAUSE</b>	<b>REMEDY</b>
Quick refrigerant loss.	Open in system.	Check compressor head gasket. Check Hoses or tubing for holes. Check connections. Replace defective component. Service system
Defective O-Ring.	Replace defective O-Ring. Service system	
	Loose connections.	Tighten connections. Service system
Slow refrigerant loss.	Loose connections.	Tighten connections. Service system

**8.0 ILLUSTRATED PARTS LIST**

**8.1 EXPLANATION OF SYMBOLS:**

ALT - The Part Number shown is an approved alternate, either part number may be used.

MOD "X" Refers to modification information of this part as applicable to this assembly.

NP - Not Procurable individually, see next higher assembly.

NS - Not Shown

OBS - Obsolete

USAGE/QTY - This identifies parts used on specific applications (not common to all units). If no code is stated the part is common to all dash numbers.

.. - Part of higher assembly.

\*/# - See explanation at end of parts list. "AN", "MS" and "NAS" equivalent hardware is considered to be approved alternates for each other and may be used. The most common are as follows:

<b>PART NUMBER</b>	<b>ALTERNATE</b>	<b>DESCRIPTION</b>
AN345-516	MS35650-3312	NUT, MACHINE
AN364-624A	MS21083N6	LOCK NUT
AN365-428A	MS21044N4	LOCK NUT
AN365-832A	MS21044N08	LOCK NUT
AN501A10-6	MS35266-61	SCREW
AN935-416	MS35338-44	WASHER, LOCK
AN935-516	MS35338-45	WASHER, LOCK
AN935-616	MS35338-46	WASHER, LOCK
AN935-8	MS35338-42	WASHER, LOCK
AN960-416	NAS1149F0463P	WASHER, FLAT
AN960-416L	NAS1149F0432P	WASHER, FLAT
AN960-516	NAS1149F0563P	WASHER, FLAT
AN960-516L	NAS1149F0532P	WASHER, FLAT
AN960-616	NAS1149F0663P	WASHER, FLAT
AN960-616L	NAS1149F0632P	WASHER, FLAT
AN960-8L	NAS1149FN816P	WASHER, FLAT
AN960-10L	NAS1149F0332P	WASHER, FLAT



**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

8.2 ILLUSTRATED PARTS LIST SZ58-002 MOTOR COMPRESSOR ASSEMBLY.

<b>FIG-ITEM</b>	<b>PART NUMBER</b>	<b>NOMENCLATURE</b>	<b>QTY</b>	<b>USAGE CODE</b>	<b>NOTES</b>
1/2/3/4	SZ58-002-1	MOTOR COMPRESSOR ASSY		A	
1/2/3/4	SZ58-002-1A	MOTOR COMPRESSOR		B	
1/2/3/4	SZ58-002-1B	MOTOR COMPRESSOR		C	
1	-1	SZ58-003-1	MOTOR ASSEMBLY	1	
1/2	-2	SCF206T-21905	COMPRESSOR, R-12	1	
		ALT: CR206R			
		ALT: CF206R			
		SZ84-913OP-1	COMPRESSOR, R-134a		SB 65-R134
		SZ84-913TJ-1	COMPRESSOR, R-134a		EO 58-002-4A
1	-3	SZ43-004-1A	JACK SHAFT ASSEMBLY	1	
2	-4	SZ43-018-3	PULLEY	1	
2	-5	G X 5/8	BUSHING	1	
		ALT: G X 5/8M			
1/3	-6	SZ58-019-3	MOUNT	4	A,B
1/3	-7	SZ43-017-3	PULLEY	1	
1/3	-8	SZ43-009-3	PULLEY	1	
2	-9	NAS1352-4H16P BOLT		2	
	-9A	AN960-416	WASHER, FLAT	2	
		ALT: NAS1149F0463P			
1/2/3	-10	AN5-5A BOLT		4	
	-10A	5/16 X 3/4	WASHER, FLAT	4	
1	-11	1/4-20UNC-2A X 2.25	BOLT	2	
	-11A	AN935-416	WASHER, LOCK	2	
		ALT: MS35338-44			
	-11B	AN960-416L	WASHER, FLAT	2	
		ALT: NAS1149F0432P			
2	-12	1/4-28UNC-2A X 2.25	BOLT	1	
	-12A	AN960-416	WASHER, FLAT	1	
		ALT: NAS1149F0463P			
2	-13	MS35649-22382 NUT		12	A,B
	-13A	AN935-616L	WASHER, LOCK	12	A,B
		ALT: MS35338-46			
	-13B	AN960-616L	WASHER, FLAT	12	A,B
		ALT: NAS1149F0632P			
2/4	-15	1/4-20UNC-2A X 1.25	BOLT	2	
	-15A	1/4-20UNC-2B	NUT (ANSI)	2	
	-15B	AN960-416	WASHER, FLAT	2	
		ALT: NAS1149F0463P			
3	-20	AN5H5A	BOLT	1	
	-20A	SZ37-014-3	WASHER	1	
3/4	-23	SZ65-008-3	BOLT, SAFETY	4	A,B
	-23A	AN315-5R	NUT, JAM	4	A,B
	-23B	AN960-516L	WASHER, FLAT	4	A,B
		ALT: NAS1149F0532P			



**ZEE Systems, Inc.**


**COMPONENT MAINTENANCE MANUAL SZ58-65**

<b>FIG-ITEM</b>	<b>PART NUMBER</b>	<b>NOMENCLATURE</b>	<b>QTY</b>	<b>USAGE CODE</b>	<b>NOTES</b>
1/2	-24	187L075	BELT, PRIMARY	1	
1/2	-25	SZ58-012-3	FRAME, SIDE	1	A,B
1	-26	SZ44-007-4	CLAMP	1	
1	-27	SZ44-007-3	CLAMP	1	
1/3	-28	SZ58-009-3	PLATE, COMPRESSOR	1	
	-28A	SZ58-440-1	BOLT, COMP. MOUNT	3	EO 58-002-2
2	-29	SZ43-008-3	PULLEY	1	
1/2	-30	SZ58-018-3	ANGLE	2	A,B
2	-32	SZ44-008-5	BAR	1	
2/4	-33	SZ44-008-7	BAR	1	
1	-34	ALT: SZ58-010-1	SUPPORT ASSEMBLY	2	EO 58-010-3
	-34D	AN4-44A	BOLT	2	EO 58-010-3
	-34B	AN364-428A	LOCKNUT	2	EO 58-010-3
		ALT: MS21083N4			
	-34C	AN960-416	WASHER, FLAT	2	EO 58-010-3
			ALT: NAS1149F0463P		
	-34	SZ58-010-3	BAR	2	PRE-E.O. 58-010-3
	-34A	AN4-57A	BOLT	2	PRE-E.O. 58-010-3
	-34B	AN364-428A	LOCKNUT	2	PRE-E.O. 58-010-3
		ALT: MS21083N4			
	-34C	AN960-416	WASHER, FLAT	2	PRE-E.O. 58-010-3
			ALT: NAS1149F0463P		
	-34E	SZ44-009-5	PAD	2	PRE-E.O. 58-010-3
1	-35	187L100	BELT	1	
1/2	-36	SZ58-011-3	BAR, EXTENSION	2	
2/4	-38	SZ43-020-3	BOLT, SAFETY	2	
2/4	-39	AN4-11A	BOLT	1	
2/4	-43	SZ58-013-3	CLIP, SAFETY	1	
1/3	-44	SZ58-012-4	FRAME, SIDE	1	A,B
1	-45	SZ41-019-3	SPACER	1	
1/4	-46	SZ41-034-1B	FAN SHAFT ASSEMBLY	1	
1/4	-46A	1063T-100	BLADE	4	
1	-47	SZ58-006-3	SPACER	4	A,B



**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

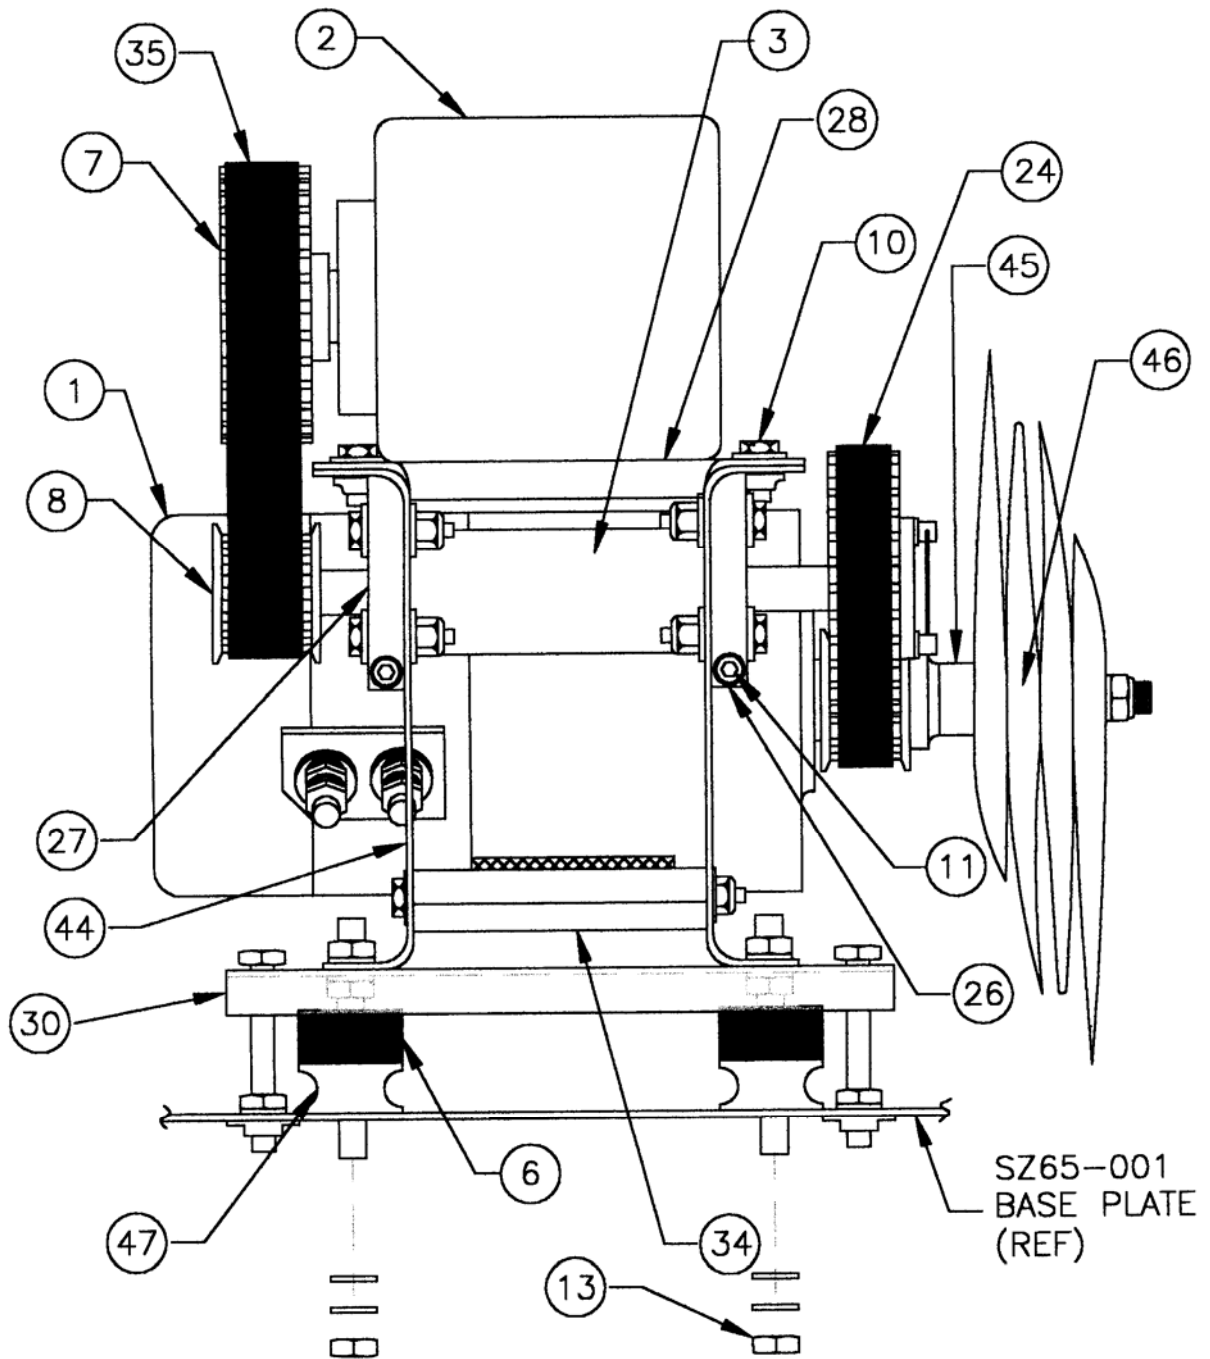


**FIG. 1**



**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

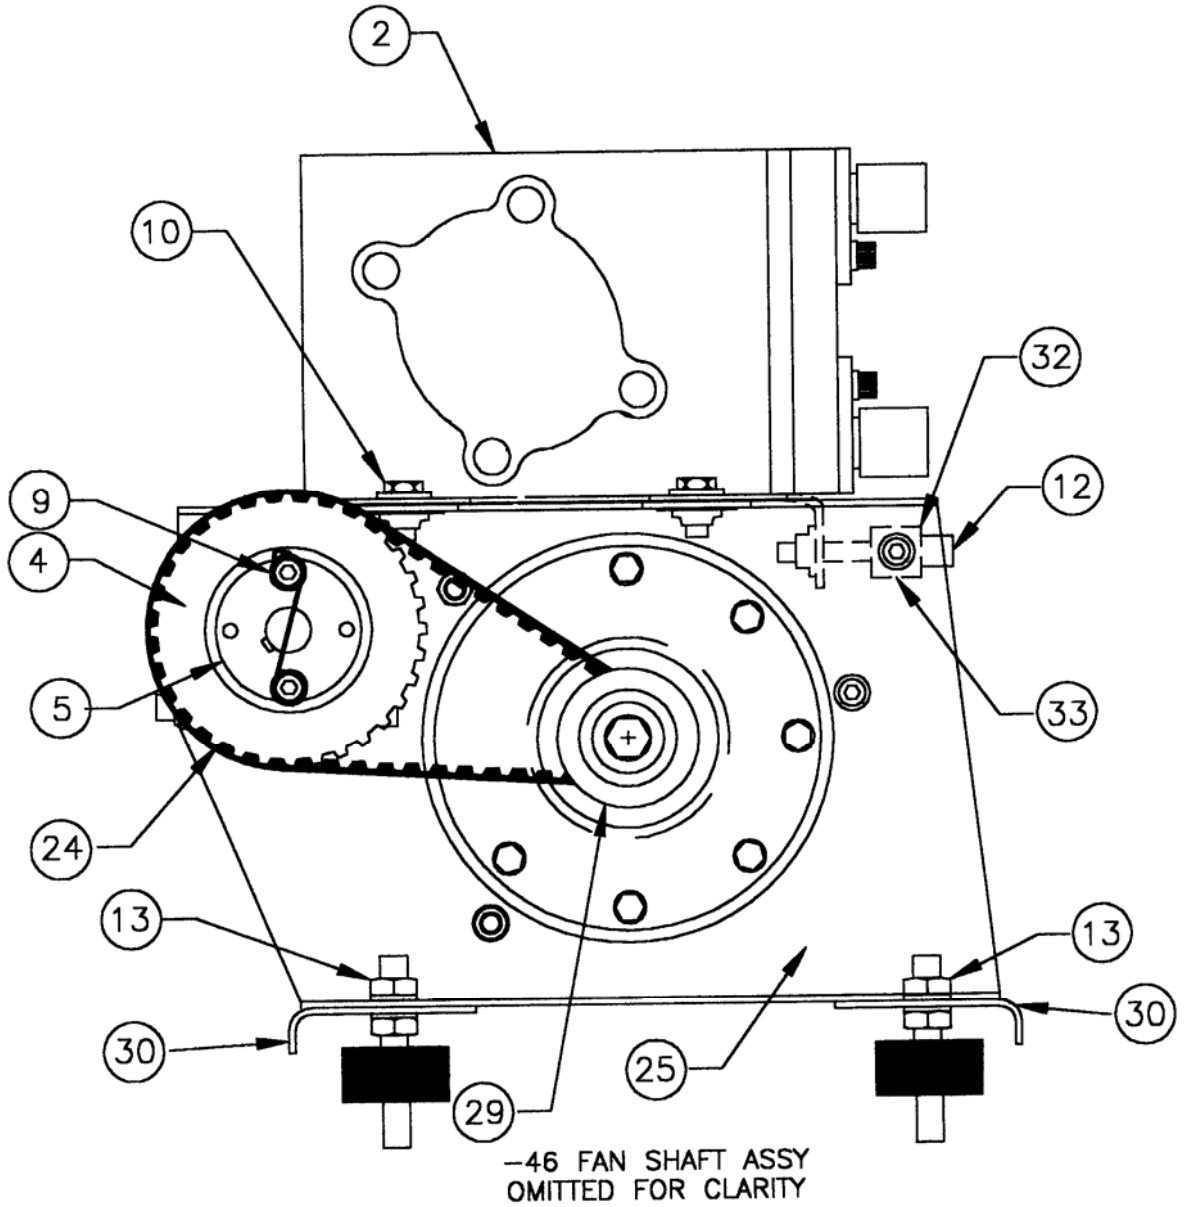


**FIG. 2**



**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

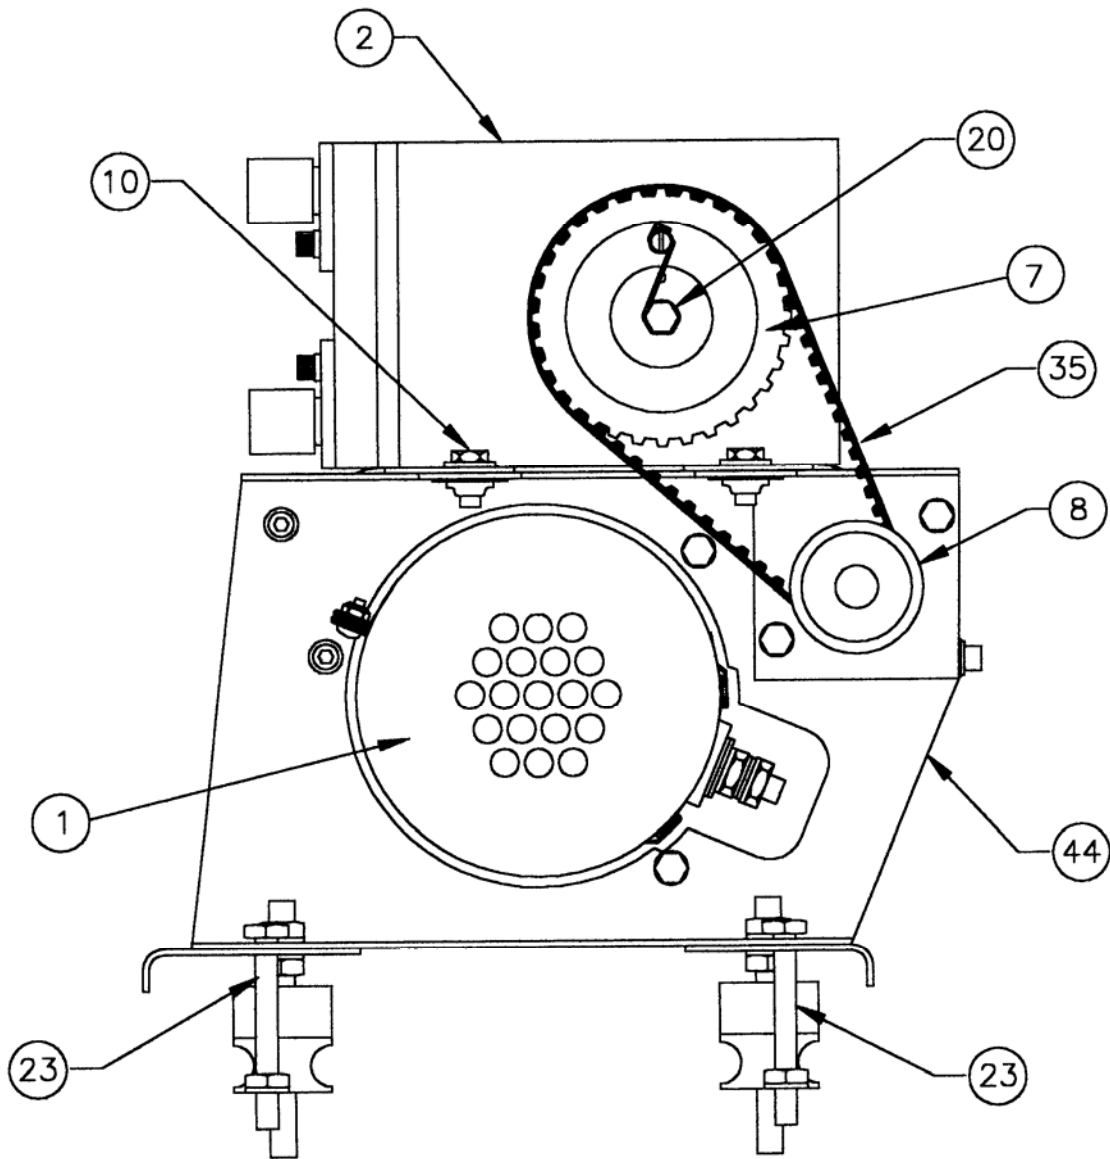


**FIG. 3**





**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

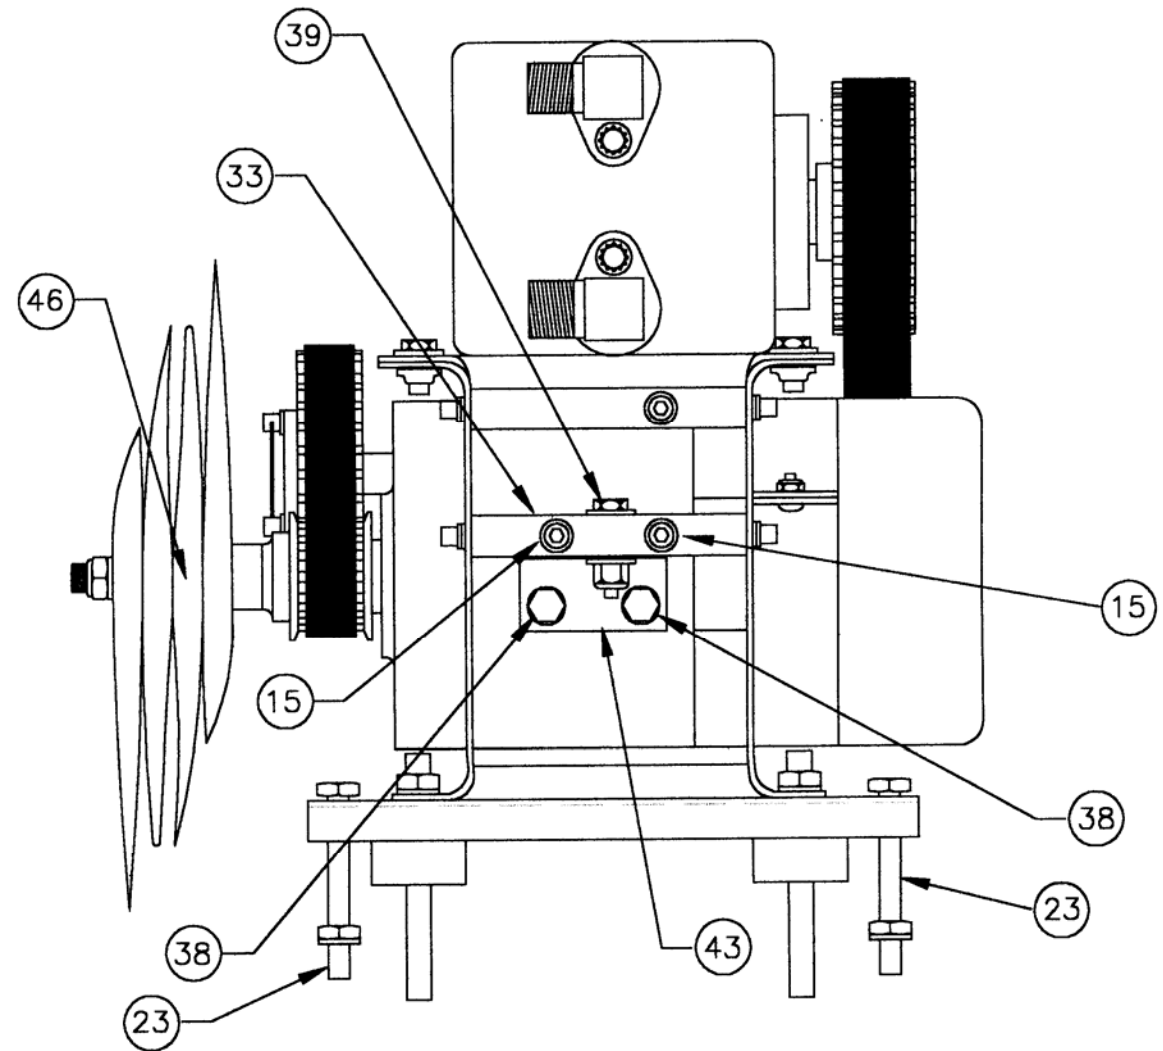

**FIG. 4**



**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

**8.3 ILLUSTRATED PARTS LIST SZ65-001 MOTOR COMPRESSOR CONDENSER ASSEMBLY.**

<b>FIG-ITEM</b>	<b>PART NUMBER</b>	<b>NOMENCLATURE</b>	<b>QTY</b>	<b>USAGE CODE</b>	<b>NOTES</b>
5/6/7	SZ65-001-1	MOTOR-COMPRESSOR CONDENSER ASSEMBLY		A	
5/6/7	SZ65-001-1A	MOTOR-COMPRESSOR CONDENSER ASSEMBLY		B	
5/6/7	SZ65-001-1B	MOTOR-COMPRESSOR CONDENSER ASSEMBLY		C	
5/6/7	SZ65-001-1C	MOTOR-COMPRESSOR CONDENSER ASSEMBLY		D	
5/6/7	SZ65-001-2	MOTOR-COMPRESSOR CONDENSER ASSEMBLY		E	
8	SZ65-001-1C (MOD D)	MOTOR-COMPRESSOR CONDENSER ASSEMBLY		F	MOD D
-1	SZ58-002-1A	MOTOR COMP. ASSY	1	A,B,C,D,E	
	Z26-8900-1		1	F	MOD D
-2	SZ65-008-3	BOLT, SAFETY	4	A,B,C,D,E	
-3	SZ65-003-1	BASE PLATE	1	A,B,C,D,E	
	SZ72-003-2		1	F	MOD D
-4	Z1008180F254	HOSE ASSY	1	A	
-5	SZ55-033-2	COIL ASSY	1	A,B,C,D,E	
-6	SZ65-007-3	PLATE	1	A,B,C,D,E	
-7	SZ65-004-1	DUCT, OUTLET	1		
-8	SZ65-004-1A	DUCT, INLET	1	A,B,C,D,E	
	SZ65-004-2	DUCT, INLET	1	F	MOD D
-9	Z1008000Y220	HOSE ASSY	1	B,C	
-10	Z1008180W265	HOSE ASSY	1	B,C	
-11	Z10010000X230	HOSE ASSY	1	B,C	
-12	SZ55-035-3	UNION ALT: DS100-1	1	D	
	DS200U137-8	UNION	1	D,E,F	SB 65-R134
-13	SZ65-014-5	FITTING, BULKHEAD	1	B,C,D	
	DS108	FITTING, BULKHEAD	1	D	
	DS200B137-10	FITTING, BULKHEAD	1	D,E,F	SB 65-R134
-13A	AN901-10A	WASHER	1		
-13B	AN924-10D	NUT	1		
-14	SZ65-014-3	FITTING, BULKHEAD	1	B,C,D	
	DS200B-8	FITTING, BULKHEAD	1	D,E	SB 65-R134
	DS290B-8	FITTING, BULKHEAD 90°	1	F	MOD D
-14A	AN901-8A	WASHER	1		
-14B	AN924-10D	NUT	1		
-15	SZ65-009-1	PANEL ASSY	1	B,C,E	EO 65-001-3
-16	SZ65-009-2	PANEL ASSY	1	B,D,E,F	EO 65-001-3
-17	SZ65-009-4	PANEL ASSY	1	C	
-18	SZ65-010-1	PANEL ASSY	1	B,C,D,E,F	EO 65-001-3
-19	SZ65-011-1	PANEL ASSY	1	B	
-20	SZ65-011-19	PANEL ASSY	1	C,D,F	
-21	SZ65-018-1	PANEL ASSY	1	E	EO 65-001-3
-22	SZ65-009-3	PANEL ASSY	1	D,F	



**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

-23	Z10010000E206	HOSE ASSY	1	D		
	Z20010AB224	HOSE ASSY	1	D	SB 65-R134	
-24	Z1008000D110	HOSE ASSY	1	D		
	Z2008AC150	HOSE ASSY	1	D	SB 65-R134	
-25	Z1008270I210	HOSE ASSY	1	D		
	Z2008255DB180X230	HOSE ASSY	1	D,F	SB 65-R134	
-26	SZ65-006-3	SPACER	4	A,B,C,D,E		
8	-27	AN6-7A	BOLT	4	F	MOD D
8	-28	MS35338-46	WASHER, LOCK	4	F	MOD D
8	-29	NAS1149F0663P	WASHER, FLAT	4	F	MOD D
8	-30	MS35206-245	SCREW	2	F	MOD D
8	-31	MS21083N08	NUT, LOCK	2	F	MOD D
8	-32	NAS1149FN816P	WASHER, FLAT	4	F	MOD D
8	-33	MS21919WDG3	CLAMP	2	F	MOD D
8	-34	SZ65-800-1	MOTOR BLOWER ASSY	1	F	MOD D
8	-35	AN3-5A	BOLT	4	F	MOD D
8	-36	NAS1149F0332P	WASHER, FLAT	4	F	MOD D
8	-37	DS200A8X8F	ADAPTER, PRESSURE SWITCH	1	F	MOD D
8	-38	Z99-032-1	PRESSURE SWITCH	1	F	MOD D
8	-39	Z03-1-4	TERMINAL BLOCK	1	F	MOD D
8	-40	MS21083N08	NUT, LOCK	2	F	MOD D
8	-41	NAS1149FN816P	WASHER, FLAT	2	F	MOD D
8	-42	NAS1096-2-8	SCREW	2	F	MOD D
8	-43	DS290B-8	FITTING, BULKHEAD 90°	1	F	MOD D
8	-44	DS200B-10	FITTING, BULKHEAD	1	F	MOD D
8	-45	Z26-200-8	BACK SEAT VALVE	1	F	MOD D
8	-46	Z26-200-10	BACK SEAT VALVE	1	F	MOD D
8	-47	Z20010200CC065	HOSE ASSY, SUCTION	1	F	MOD D
8	-48	Z2008300BD115	HOSE ASSY, DISCHARGE	1	F	MOD D


For details on installing MOD D, Usage Code F, refer to ZEE Systems, Inc. Engineering Order 65-001-5.

Refer to ZEE Systems, Inc. CMM Z26-8900 for details on the Z26-8900 Motor Compressor Assembly.



**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

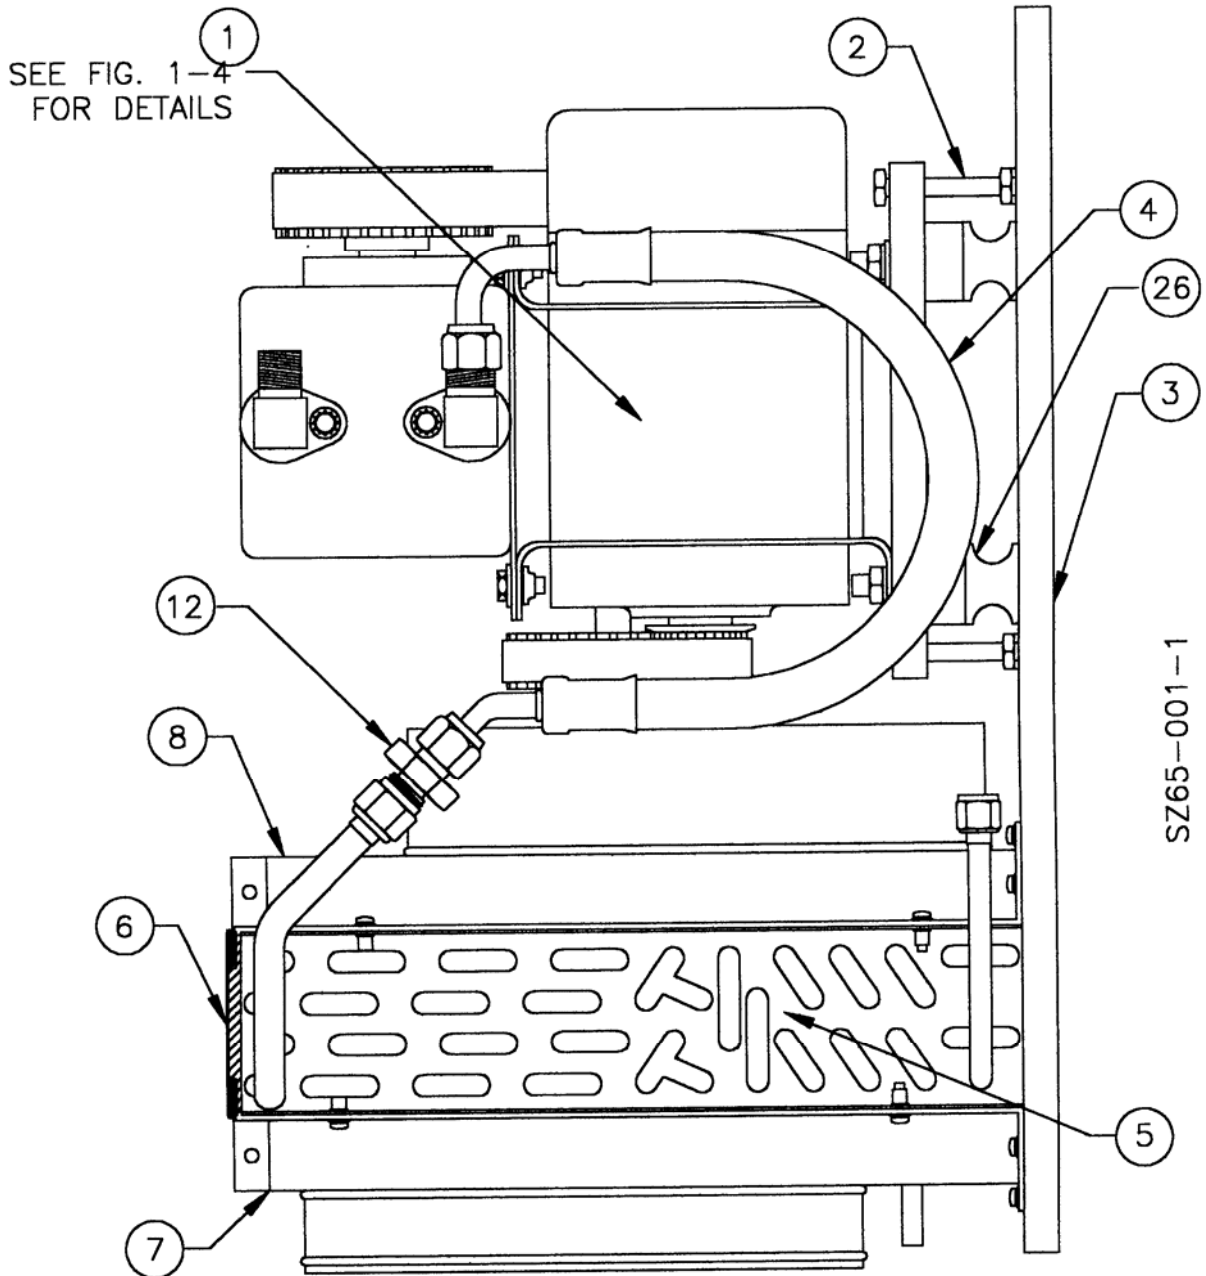


**FIG. 5**



**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

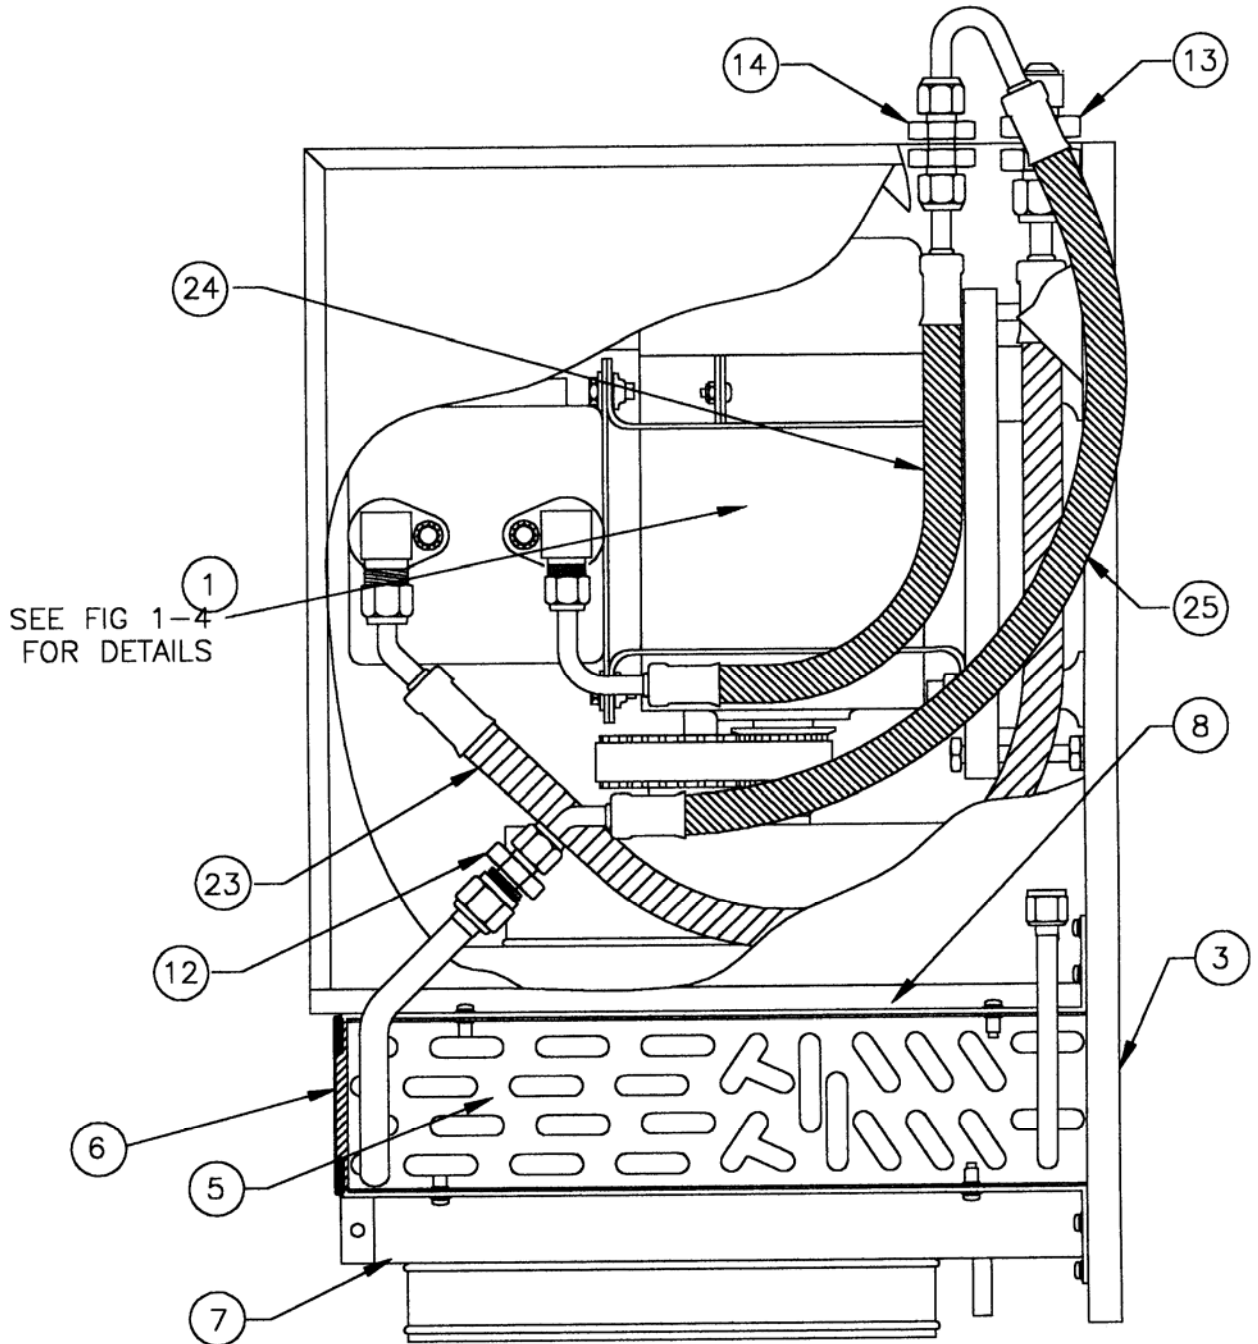


**FIG. 6**



**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

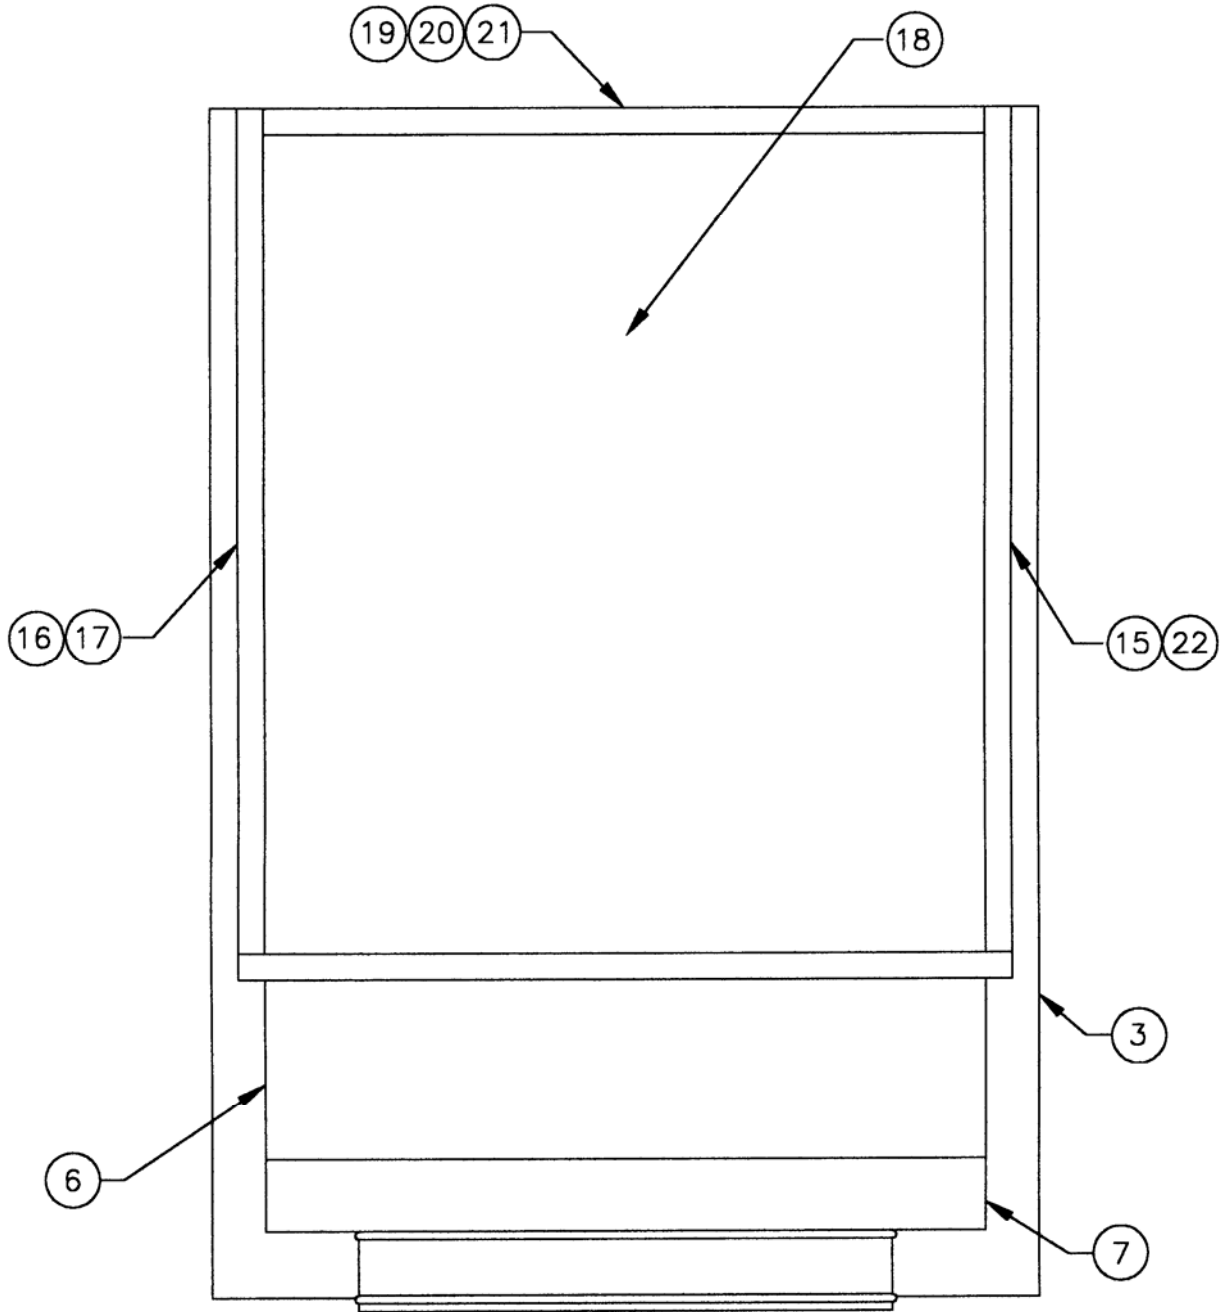


**FIG. 7**



**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

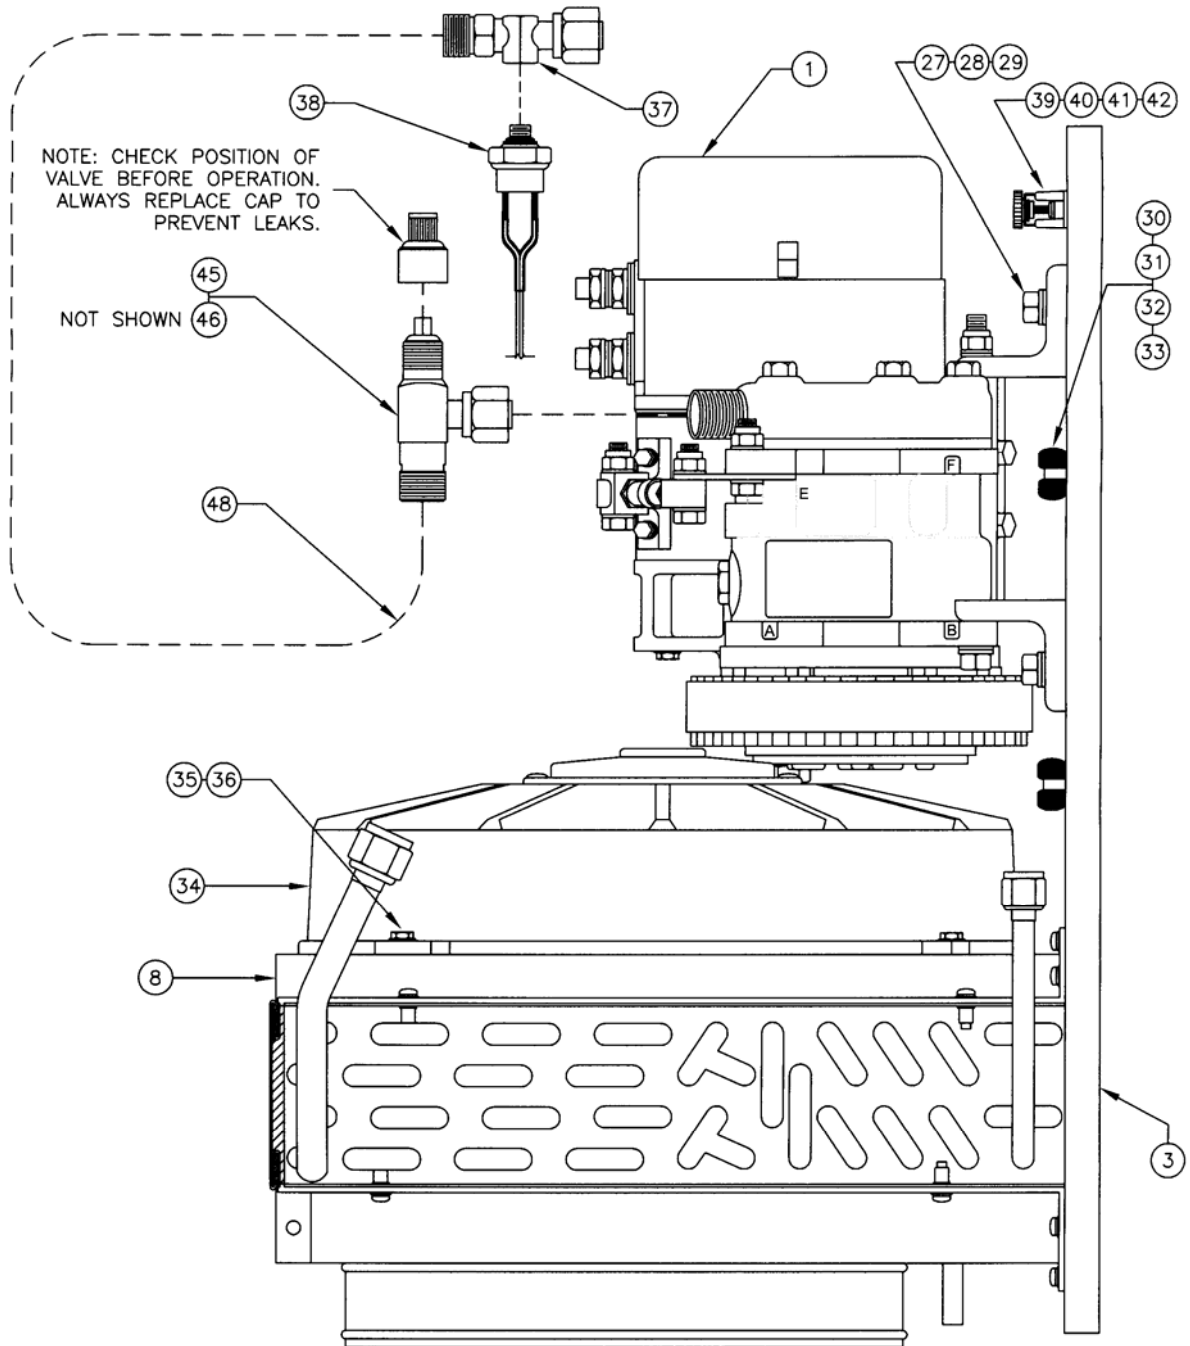


MOD D Major component changes.  
Plumbing, wiring and enclosure details omitted for clarity.

**FIG. 8**



**ZEE Systems, Inc.**

**COMPONENT MAINTENANCE MANUAL SZ58-65**

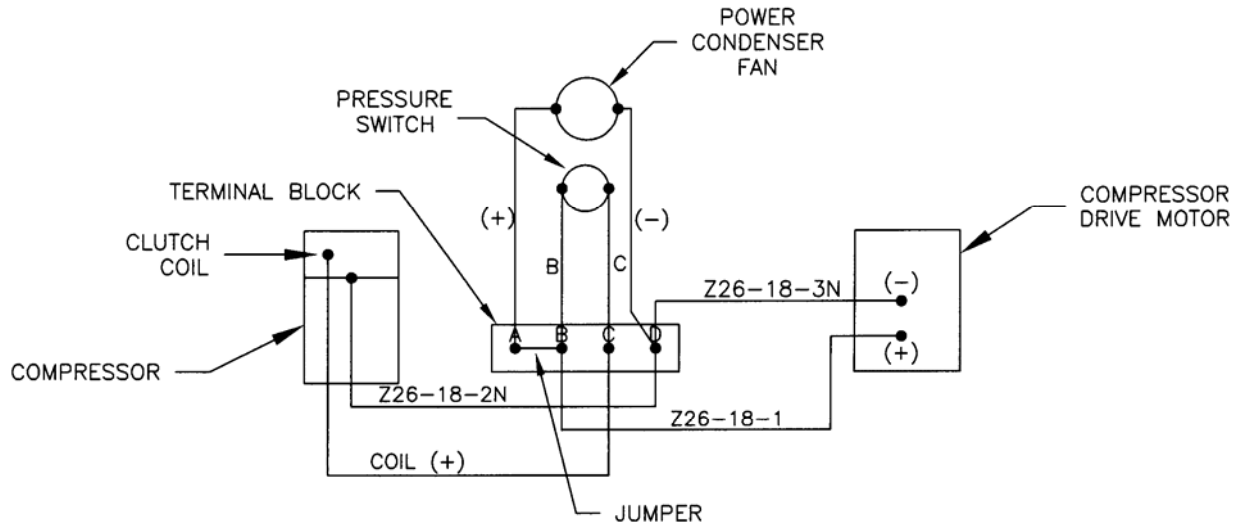

WIRING DIAGRAM 1.

MOD D ONLY.

**9.0 SUMMARY OF MODIFICATIONS**

9.1 **MOD 'A'** Upgrade to R134a from R-12. Install Kit P/N: K65-R134 in accordance with Service Bulletin 65-R134. Add 'R134' at the end of the serial number.

9.2 **MOD 'B'** For R12 only. Install Hose Assembly P/N: SZ65-100DFX-1 as replacement for Z1008270I210.

9.3 **MOD 'C'** Upgrade to R134a from R-12. Install Kit P/N: K65-R134-1 in accordance with Service Bulletin 65-R134-1. Add 'R134' at the end of the serial number.

9.4 **MOD 'D'** Modify unit with new Z26-8900-1 Motor Compressor Assembly and SZ65-800-1 Motor Blower Assembly in accordance with E.O. 65-001-5.